


SF2: Sign panels in free standing frames

ASSEMBLY INSTRUCTIONS

(NOTE: Assembly is simpler with 2 people!)

1. Lay one post horizontally on a flat surface with one of the channels uppermost.
2. Fix one cross-bar (see overleaf) at the very end of the post.
3. Place the sign panel so that it is positioned in the channels of the upright and the cross-bar. The bottom of the panel should be level with the bottom of the post.
4. Place the second post in position, ensuring that it completely encloses the sign panel, then tighten the cross-bar lock to hold in position.
5. Fix the base(s) to the posts (see overleaf).
6. Stand display up
7. Adjust height of top cross-bar if necessary
8. Push end caps into tops of posts.

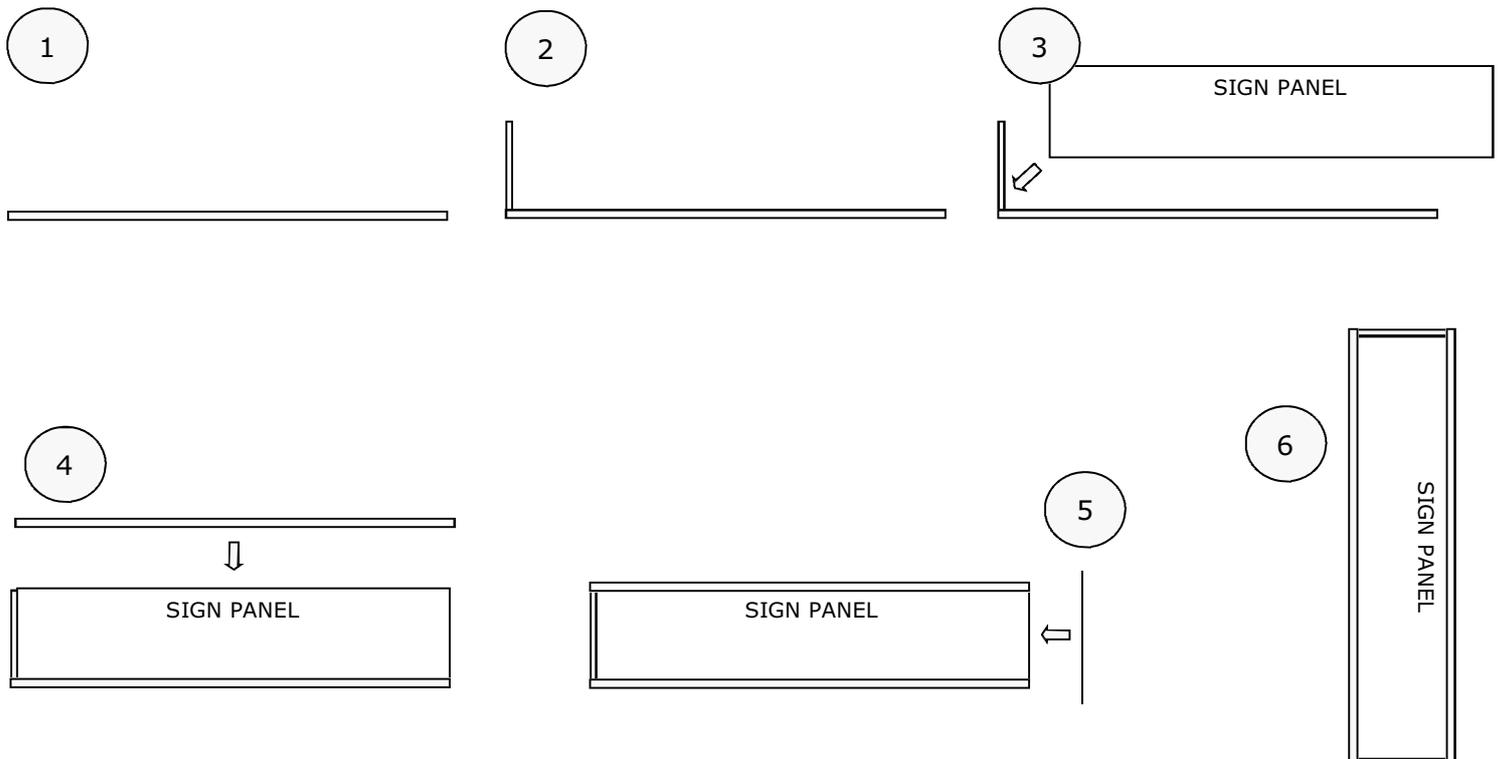


SF2: Sign panels in free standing frames

ASSEMBLY INSTRUCTIONS

FIX CROSS-BAR TO POST

1. Ensure that parts of lock in end of cross-bar are 'together'
2. Position lock in post so that cross-bar is in desired position
3. Use allen key to tighten lock so that lock opens and cross-bar is held securely in place

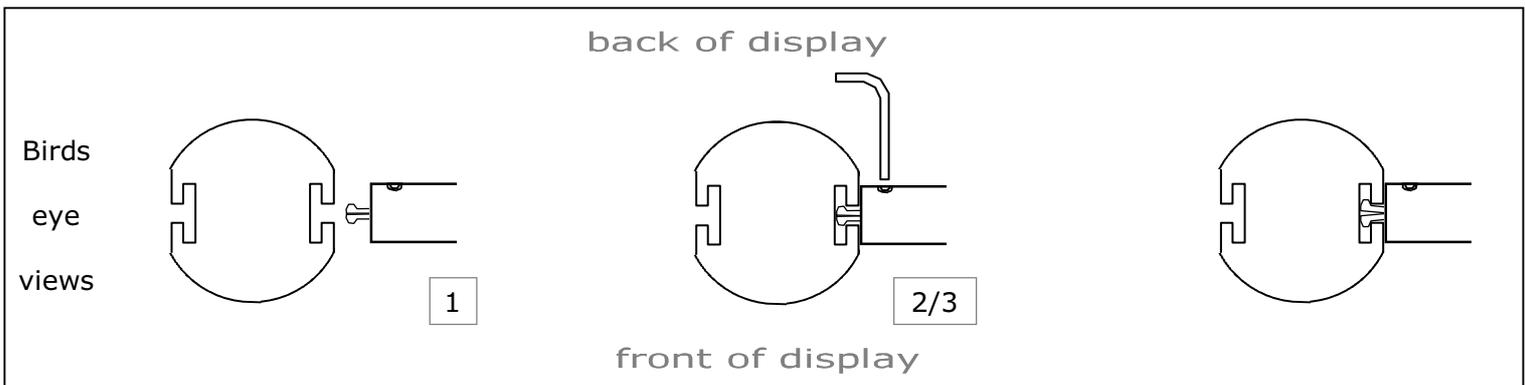

FIX BASES TO POSTS

1. Undo spigot (remove bolt)
2. Put bolt through weighted base plate from underside
3. Part-screw rectangular fitting (comes split diagonally into two parts) back on to bolt
4. Place rectangular part of fitting inside base of post (opposite end to angled plate)
5. Tighten bolt using large allen key supplied (to lock post securely to base).

